


OXINS A & B TEST PROCEDURE

How to perform the test





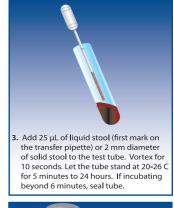




right and left sample (lower) ports.

Incubate 5 ± 1 minutes at 20-26 C.



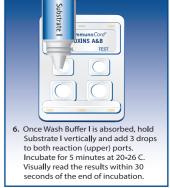



©2008 SN11224 REV. 10/16

The following illustration depicts approximate sample size when testing solid, semi-solid, or non-pipettable stools.



This illustration is representative of the current Package Insert at the time of publication. Please refer to the most current version of the package insert for complete instructions.

3471 River Hills Drive Cincinnati, Ohio 45244 USA Telephone: 513.271.3700

USA/CORPORATE OFFICE Orders / Customer Service: 1.800.543.1980 Technical Support: 1.800.343.3858 Information Fax: 513.272.5432

Ordering Fax: 513.271.0124 www.meridianbioscience.com

MERIDIAN BIOSCIENCE EUROPE

Belgium/Luxemburg Tel: +32 (0) 67 89 59 59 France Tel: +33 (0) 1 42 56 04 40 Germany Tel: +49 (0) 3371 681 500 Italy Tel: +39 0331 43 3636

Netherlands Tel: +31 (0) 411 62 11 66 United Kingdom Tel: +44 (0) 20 8453 7970

